



## Powerwand Directions

We give a flip.

The Powerwand is now highly polished and nickel plated.

The end cap has been improved also. It now has a deeper rim and slides on easily. There may be a ding or two on these caps, they are like that when I get them and I can't polish out dents. Can't see them anyway as they are on the bottom.

The nickel plating is very resilient and resists corrosion. You can easily remove fingerprints from handling with a soft, dry cloth. No polishing compound needed.

Please be aware that the Powerwand **contains eight powerful neodymium magnets**. As a result the Powerwand has a strong magnetic field surrounding it. Magnetic recording media such as credit card strips, computer monitors and computer hard drives should be kept, at least, 8 inches away from the Powerwand.

To turn on the Powerwand, stand the Powerwand onto the top end and remove the end cap. Don't worry about harming crystal's point, it's recessed. Turn on the switch on the frequency box and the red LED flickers indicating that it is on.

Make your intents – no limits to number!

To change the battery, stand the Powerwand on end, remove the copper cap and also remove the plastic lid of the frequency box. Remove the battery from the batter clip very carefully so as not to damage the wiring or the clip. It helps to use the side of your thumb to roll the battery connector off of the battery. Replace with a fresh battery and reseal the unit. Please discard your used battery in an environmentally conscious way.

The Powerwand is warranted for a year from date of purchase for parts and workmanship.

The Powerwand is NOT waterproof and is not intended for outdoor used.

Enjoy,  
Andy Schwarm ,  
[www.CTBusters.com](http://www.CTBusters.com)